GENETIC HEALTH SERVICES GENETIC HEALTH SERVICES GRENT GROWN AND THE PROPERTY OF THE PROPERTY

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

features and benefits:

- State-of-the-art 30mm aluminum tube frame with snap button assembly
- Easy to store and ship
- Quick to set up

- Kit includes: one frame, one dye-sublimated zipper pillowcase graphic, stand-off pillowcase graphic ladder, and one wheeled molded OCL storage case
- Lifetime hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
Assembled unit: 116"w x 93"h x 27.9"d	Total visual area: 114"w x 91.5"h
Stand-off pillowcase ladder: 23.6"w x 92.7"h x 17.7"d	Pillowcase graphic ladder: 23.6"w x 97"h
Approximate weight (includes graphics): 45 lbs / 20.36 kg	Please be sure to include a 2" bleed around the perimeter.
	Refer to related graphic template for
Shipping	more information.
Shipping dimensions - ships in two cases: 1 OCL case: 19"l x 19"w x 56"h	
Approximate shipping weight (with cases): 65 lbs / 29.5 kg	

additional information:

Graphic material:


Dye-sublimated zipper pillowcase fabric

Optional accessories: Lumina 8-50 watt halogen lighting, literature pocket, graphic header, larger freight cases





www.nvp.com.au

Parts Included – Backwall			
Part Label	Qty	Part Code	
5MM STEEL BASE STYLE 2 FOR LINEAR	x2	LN114-S2	
90 DEGREE ELBOW JOINT FOR 30MM TUBING	x2	TC-30-90	
1114MM X 30MM TUBE	x4	WS10-T1	
1270MM X 30MM TUBE	х6	WS10-T2	
(2) 128MM TUBES SWAGED WITH PART TC-30-T	x1	WS10-T4	
(2) 128MM TUBES SWAGED WITH PART TC-30-X	x1	WS10-T5	
1114MM X 30MM TUBE WITH TC-30-T AND TC-30-90B	x2	WS10-T6	
(2) 128MM TUBES SWAGED WITH PART TC-30-T	x1	WS10-T7	

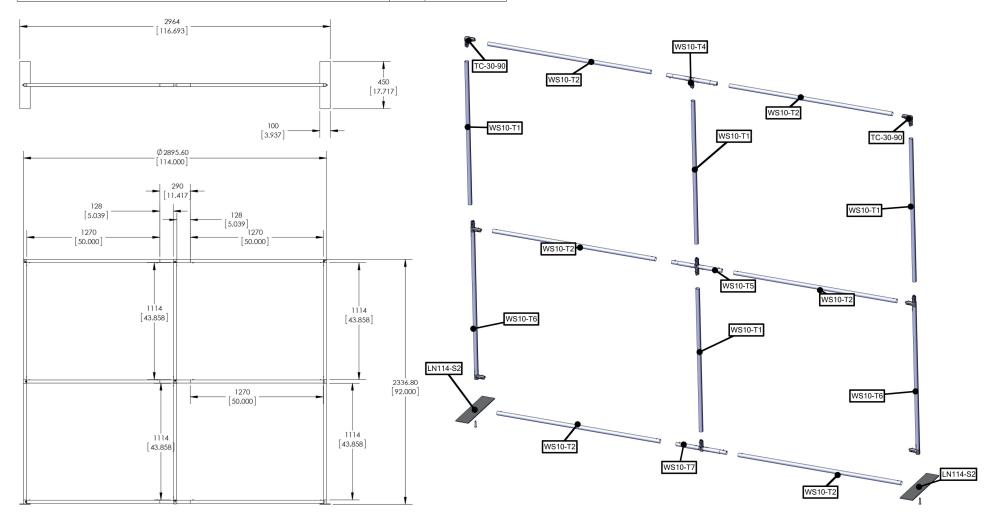



Parts Included – Ladder			
Part Label	Qty	Part Code	
FABRIC PILLOWCASE GRAPHIC	x1	WL01-G	
BACKWALL CONNECT WITH (2) TCH30 BACK TO BACK	x2	TCH30	
535MM X 30MM TUBE WITH PART TC-30-T BOTH ENDS	x1	WL01-T1	
535MM X 30MM TUBE WITH (2) TC-30-90T	x2	WL01-T2	
R2000MM X 30MM TUBE (97MM ARC)	x4	WL01-T3	

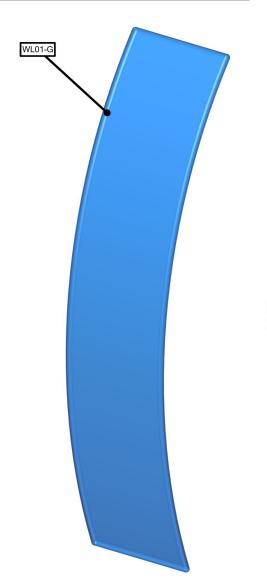


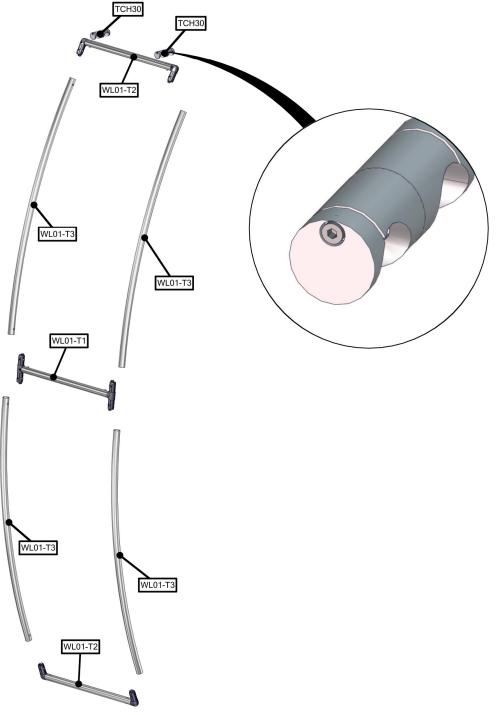


STEP 1: ASSEMBLE FRAME

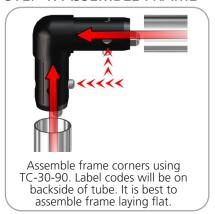


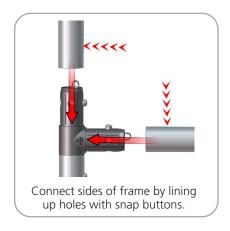

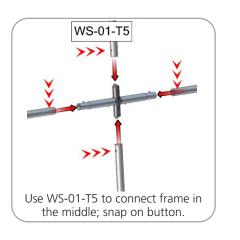

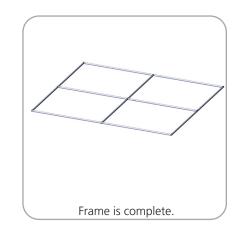


STEP 2: ATTACH FEET

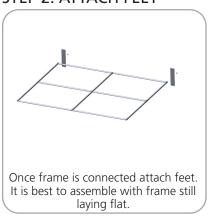



Use provided allen key, secure feet to bottom of frame by screwing bolt.


STEP 3: ATTACH GRAPHIC Slide graphic over top end of frame. Zip fabric closed on bottom.

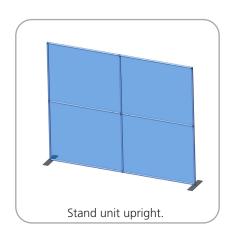


STEP 4: ASSEMBLE LADDER FRAME

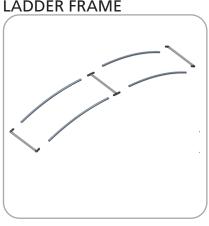


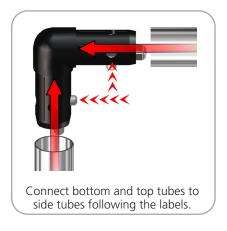

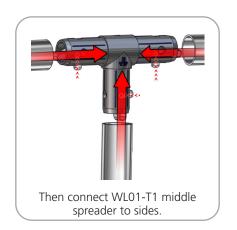


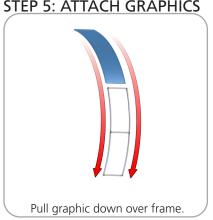


STEP 5: ATTACH GRAPHICS

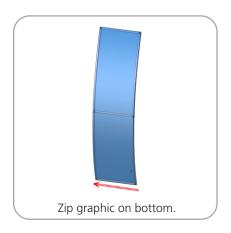

STEP 6: ATTACH TO BACKWALL WITH CLAMPS

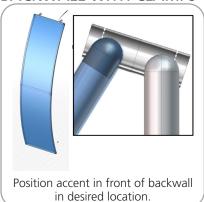



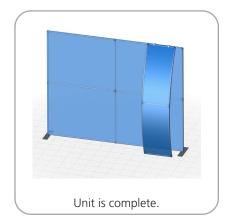

Check out these related products:

